



Tech Info Library

Macintosh: Logic Boards May Mis-align with Programmer's Switch

Revised: 9/11/92
Security: Everyone

Macintosh: Logic Boards May Mis-align with Programmer's Switch

=====

Article Created: 28 May 1986

Article Change History

09/07/92 - REVIEWED
• For technical accuracy

TOPIC -----

After I had my the logic board in my Macintosh IIcx upgraded, it behaves strangely and sometimes the sad Macintosh will show up at startup. What's going on?

DISCUSSION -----

After the installation of a logic board, a Macintosh's strange behavior or the appearance of the Sad Macintosh may stem from the improper alignment of the reset and interrupt buttons with the programmer's switch on the outside of the case.

Workaround:

Remove the progammer's switch, re-insert the programmer's switch, and check the alignment with the corresponding buttons on the logic board. If the problem persists, remove 1 millimeter of plastic from the ends of the two projections on the inside of the programmer's switch; these two ends contact the buttons.

Copyright 1986, Apple Computer, Inc.

Tech Info Library Article Number:2005