



# Tech Info Library

## ImageWriter LQ: Why Top Half of Ribbon Wears Faster

Revised: 11/22/91  
Security: Everyone

ImageWriter LQ: Why Top Half of Ribbon Wears Faster

=====

This article last reviewed: 7 April 1988

Some users have asked why their ImageWriter LQ printer seems to print only on the top third of the ribbon.

The ImageWriter LQ adjusts the ribbon height with every page it prints, in a four-page cycle. If you print predominantly single- or double-page documents, you will see wear only on the upper half of the ribbon.

You use the ribbon fully only when you print documents of at least four pages. After that, the fifth page uses the same ribbon section as page one, page six the same as two, etc.

Copyright 1988 Apple Computer, Inc.

Tech Info Library Article Number:2870