



# Tech Info Library

## Macintosh SE 2/40: How To Configure for 2.5MB RAM

Revised: 9/15/92  
Security: Everyone

Macintosh SE 2/40: How To Configure for 2.5MB RAM

=====  
Article Created: 29 November 1988

### Article Change History

-----  
9/15/92 - REVIEWED  
• For technical accuracy.

### TOPIC -----

How do I configure a Macintosh SE for 2.5MB of RAM? I've heard there's a jumper on the logic board that needs to be removed.

### DISCUSSION -----

To properly configure the Macintosh SE 2/40 (or any Macintosh SE with a RAM configuration jumper labeled "2/4MB to 1MB") for 2.5MB, the jumper must be completely removed.

Apple suggests leaving the jumper connected to one pin so that it is available for future upgrades.

NOTE: The RAM configuration for the Macintosh SE 2/40 is the OPPOSITE of previous Macintosh SE and Macintosh Plus systems. The highest capacity SIMMs occupy sockets 3 and 4 on the newer boards with the jumper RAM configuration. Older boards with the solder configuration require the highest capacity SIMMs to occupy sockets 1 and 2.

Copyright 1989 Apple Computer, Inc.

Tech Info Library Article Number:3479