

AppleShare: Set Apple IIGS Startup Slot to 7 To Boot

Revised: 8/20/89 Security: Everyone

AppleShare: Set Apple IIGS Startup Slot to 7 To Boot

This article last reviewed: 8 August 1989

TOPIC -----

What setting do I use in the AppleShare startup slot on an Apple IIGS?

I have been told that when setting the slots for an Apple IIGS AppleShare workstation the startup slot should be set to "Scan". Others have told me that startup slot should actually be set to 7. Which is correct?

DISCUSSION -----

Since a Scan operation starts at slot 7 and works down the slots until reaching slot 1, setting the startup slot to "Scan" can work. If the ProDOS-prepared server is available as the Apple IIGS starts up, the booting takes place from the server.

However, should the server be unavailable as the Apple IIGS starts up, AND a startup disk is in an attached disk drive, booting takes place from that disk drive.

If booting only from the server is desired, then it is probably a good idea to set the startup slot to 7 to ensure that the boot process ONLY works across the network.

Copyright 1989 Apple Computer, Inc.

Tech Info Library Article Number: 4049