

LaserWriter IINT: How To Print from Sun 360 Under UNIX

Revised: Security:	
LaserWriter I	INT: How To Print from Sun 360 Under UNIX
========	:======================================
This article	last reviewed: 2 November 1989
TOPIC	
This article UNIX.	discusses how to print to a LaserWriter IINT from a Sun 360, under
DISCUSSION	

Here is a tip on how to get a LaserWriter IINT working with a Sun 360 system under UNIX.

The problem most often described is that the Sun provides PostScript to the LaserWriter, which begins imaging the job (green light flashing) but nothing further happens.

The cause of the problem is probably that the UNIX spooler was adding a header to the print job. After toggling the option off, the LaserWriter IINT should work as expected.

Copyright 1989 Apple Computer, Inc.

Tech Info Library Article Number:4684