



Tech Info Library

A/UX: How to Control Baud Rates and Other Serial Port Settings

Revised: 10/1/92
Security: Everyone

A/UX: How to Control Baud Rates and Other Serial Port Settings

=====

Article Created: 12 October 1990

Article Change History

08/31/92 - REVIEWED
• For technical accuracy.

TOPIC -----

When I set up baud rates and control serial port parameters, the settings revert to default values on boot up and at random times. I want to know how to control the baud rate setting and other serial port parameters. Is there a file that has these default values?

DISCUSSION -----

For printer ports, you should use a printer interface script, as in /usr/spool/lp/model, to set port speed. For applications, set port speed via termio or ioctl.

Copyright 1990 Apple Computer, Inc.

Tech Info Library Article Number:6266