



Tech Info Library

System 7: Why Trash Icon Expands When a Floppy Is Mounted

Revised: 9/17/92
Security: Everyone

System 7: Why Trash Icon Expands When a Floppy Is Mounted

=====
Article Created: 4 March 1991

Article Change History

09/16/92 - REVIEWED
• For technical accuracy.

TOPIC -----

Why does the trash icon expand when I insert a disk?

DISCUSSION -----

In System 7, items dragged to the Trash are not deleted until you select Empty Trash from the Special menu. If you drag items from a floppy to the Trash, those items will appear in the Trash whenever that disk is inserted, until you empty the Trash.

If you insert a disk that has some items in the Trash, the Trash icon will bulge when you insert the disk to let you know this disk has items in the Trash.

Copyright 1991, Apple Computer, Inc.

Tech Info Library Article Number:6846