



# Tech Info Library

## System 7: Don't Unmount a Floppy Disk from a Desk Accessory

Revised: 8/26/92  
Security: Everyone

System 7: Don't Unmount a Floppy Disk from a Desk Accessory

=====

Article Created: 8 August 1991

### Article Change History

-----

08/25/92 - REVIEWED

- For technical accuracy; edited.

### TOPIC -----

Under System 7, whenever I use a desk accessory to unmount (but not eject) a floppy disk, my system crashes.

### DISCUSSION -----

A third party incompatibility causes this. This involves only those few desk accessories (DiskTop is one) that have an unmount feature. The only workaround is to avoid unmounting disks from within desk accessories. There's no problem with simply ejecting floppy disks (leaving their icons visible on the desktop).

Copyright 1991, 1992, Apple Computer, Inc.

Tech Info Library Article Number:7984