



Tech Info Library

LaserWriter Pro, HP Emulation Mode: Switching Paper Bins (3/93)

Revised: 3/30/93
Security: Everyone

LaserWriter Pro, HP Emulation Mode: Switching Paper Bins (3/93)

=====

Article Created: 10 March 1993

TOPIC -----

How do I switch paper bins on a LaserWriter Pro in HP emulation mode?

DISCUSSION -----

If you want to switch paper bins on a LaserWriter Pro in HP emulation mode, you must send an escape code sequence directly to the printer. One way to do this is to type the escape code sequence into a text file. This is the HPCL escape code sequence to switch between paper bins:

ESC&l#H

where # is the bin selection value and the letter after the "&" is lowercase L.

- 0 is the bin selection value for the default paper tray.
- 1 " " for the upper tray.
- 2 " " for the manual feed tray.
- 4 " " for the lower tray.
- 6 " " for the envelope feeder.

For instance, to select the 500 page cassette (or lower tray), send "ESC&l4H" to the printer.

Copyright 1993, Apple Computer, Inc.

Tech Info Library Article Number:11881