



Tech Info Library

Portable StyleWriter: Problems Indicated by LEDs (6/93)

Revised: 7/6/93
Security: Everyone

Portable StyleWriter: Problems Indicated by LEDs (6/93)

=====

Article Created: 6 July 1993

TOPIC -----

This article describes problems indicated by the Portable StyleWriter lights.

DISCUSSION -----

Power light	On Line light	Error light	Problem indicated
-----	-----	-----	-----
Off	Off	Off	The power adapter is not correctly connected, or the printer is not turned on.
On	Off	On	(The printer beeps 2 or 3 times.) The printer is out paper.
On	Off	On	(The printer beeps continuously.) Paper is jammed or paper longer than 15 inches has been loaded.
On	Off	Blinks	(The printer beeps continuously.) The ink cartridge has not returned to home position. Turn printer off, wait a few seconds, then turn it on.
On	Blinks	Off	(The printer beeps 5 times.) An error occurred in the printer. Turn off the

			printer, wait a few seconds, then turn it on.
On	Blinks	Off	(The printer beeps continuously.) An error occurred while the printer started up. Turn off the printer, wait a few seconds, then turn it on.
On	Blinks	Blinks	(The printer beeps 3 times) Turn off the printer, wait a few seconds, then turn it on.
Blinks	Off	Off	(The Power light blinks once every second.) The battery is being charged.
Blinks	Off	Off	(The Power light blinks once every half second.) The battery is low.
Blinks	Off	On	(The printer beeps 5 times, and the Power light blinks once every half second. After 5 minutes, the printer beeps again, then turns off automatically.) The battery has run out of power.
Blinks	Off	Blinks	(The printer beeps 5 times, and the two lights blink alternately.) There is a problem with the battery. Charge the battery two or three times. If the problem continues, replace the battery with a new one.

Copyright 1993, Apple Computer, Inc

Tech Info Library Article Number:12514