



Tech Info Library

Portable StyleWriter: Paper Thickness Adjustment Dial (7/93)

Revised: 7/13/93
Security: Everyone

Portable StyleWriter: Paper Thickness Adjustment Dial (7/93)

=====

Article Created: 13 July 1993

TOPIC -----

This article discusses how to set the paper adjustment dial on the Portable StyleWriter.

DISCUSSION -----

The paper thickness adjustment is a thumbwheel (dial) that is detented in one of the three positions. The positions are "sheet" position, a "center" position (marked with a dot) and the "envelope" position. The thumbwheel is located on the right bottom of the printer.

The paper thickness setting should be set to:

- Sheet position: for sheet paper
- Center position: for sheet paper with graphics and transparencies
- Envelope position: for envelopes and heavy stock paper.

Without the optional sheet feeder the user can load one sheet of paper or envelope at a time into the printer. Paper can be printed while the printer is horizontally or vertically oriented. To print envelopes the printer must be in the vertical position.

Copyright 1993, Apple Computer, Inc

Tech Info Library Article Number:12601