

AudioVision 14 Display: Inaudible Boot Beep (7/93)

DISCUSSION -----

If you use the AudioVision 14 Display with some Macintosh computers, you may not hear the "boot beep" when you turn on the computer. To hear the boot beep, plug the monitor into the wall (not into the computer) AND turn on the monitor before turning on the computer.

The inaudible boot beep occurs when the AudioVision's power cord is plugged into the computer AND the computer beeps before the AudioVision is fully powered up (and able to produce sound.) The inaudible beep is known to occur in the Macintosh IIvx, IIvi, Quadra 700, 800, 900 and 950.

Copyright 1993, Apple Computer, Inc

Tech Info Library Article Number:12715