



Tech Info Library

Print Dialog Box: Select Color/Grayscale to Change Default

Revised: 8/9/93
Security: Everyone

Print Dialog Box: Select Color/Grayscale to Change Default

=====
Article Created: 3 August 1993

TOPIC -----

We want to modify the Print Dialog box and change the default to Color/Grayscale rather than the default Black & White. Can you provide us with the details? We're running System 7 and have LaserWriter driver 7.2 for the LaserWriter Pro 630.

DISCUSSION -----

The feature of selecting the default printing mode as either Black & White or Color/Grayscale is built-in on LaserWriter driver 7.2. Once either mode is selected in the Print dialog box and you print something, the mode "sticks" and becomes the default printing mode.

By the way, this feature is also present in LaserWriter driver 7.1.2 and 8.0.

Copyright 1993, Apple Computer, Inc.

Tech Info Library Article Number:12833