



Tech Info Library

Newton MessagePad: When Letter Styles Don't Stay Selected (9/93)

Revised: 9/14/93
Security: Everyone

Newton MessagePad: When Letter Styles Don't Stay Selected (9/93)

=====
Article Created: 14 September 1993

TOPIC-----

If I select a letter in the Letter Styles Preference, then tap Rarely, often the Rarely button will darken momentarily, then the selection goes back to Sometimes.

Why is this?

DISCUSSION-----

You must choose Sometimes for at least one Letter Styles selection in both upper and lower case of each character. The Newton MessagePad will not allow changing all upper or lower case letter choices for each character to "Rarely."

When you select Cursive Only or Printed Only in the Handwriting Style Preferences, your Letter Styles Preferences become limited to cursive or printed styles, respectively.

Copyright 1993, Apple Computer, Inc.

Tech Info Library Article Number:13230