



Tech Info Library

Wacky Jacks: Icon Missing from Desktop (12/93)

Revised: 12/17/93
Security: Everyone

Wacky Jacks: Icon Missing from Desktop (12/93)

=====

Article Created: 17 December 1993

TOPIC -----

Why can't I see the Wacky Jacks icon on my Desktop?

DISCUSSION -----

Check your system for the following conditions:

- 1) Ensure that your CD-ROM drive is turned on and plugged into an live electrical outlet.
- 2) Ensure the CD-ROM drive is properly connected to your Macintosh computer's SCSI port (consult your CD-ROM drive's manual for instruction).
- 3) Ensure the CD-ROM drive's SCSI ID number does not conflict with another SCSI device's ID number (consult your CD-ROM drive's manual for further information).
- 4) Ensure all CD-ROM drivers are installed.
- 5) Turn on your CD-ROM drive before your turn on your Macintosh. If your CD-ROM drive is already turned on, restart your Macintosh.
- 6) Use another CD-ROM disc. This will narrow down the problem to either the your system set-up or your CD-ROM disc.

Copyright 1993, Apple Computer, Inc.

Tech Info Library Article Number:14317