



Tech Info Library

Video Monitor: Video Playthrough Displays White Screen (1/94)

Revised: 1/19/94
Security: Everyone

Video Monitor: Video Playthrough Displays White Screen (1/94)

=====
Article Created: 19 January 1994

TOPIC -----

The video playthrough displays a white screen using Video Monitor on my AV Series Macintosh. When the screen first appears the video window flashes from black to white. Why is this happening?

DISCUSSION -----

Generally, the white screen means that the video signal is stronger than the machine can accept. It is similar to the effect when one records music on a tape deck and the volume is maximized. In that case, the sound goes to a blur of noise. In the case of your AV Series Macintosh, the result is a white screen. The opposite is when there is no signal at all and the display is completely black.

If the VCR or Television has an option for changing the video level,(it may be labeled 'Attenuation On/Off') try setting it to a lower level.

As an alternative, try adjusting some of the Video Settings such as Saturation, Brightness, and so on. By tweaking those adjustments, he may be able to achieve a satisfactory solution.

Support Information Services

Copyright 1994, Apple Computer, Inc.

Tech Info Library Article Number:14462