



# Tech Info Library

## LaserWriter Pro 810: How to Enter Super User Mode (7/96)

Revised: 7/18/96  
Security: Everyone

LaserWriter Pro 810: How to Enter Super User Mode (7/96)

=====  
Article Created: 18 February 1994  
Article Reviewed/Updated: 18 July 1996

TOPIC -----

I am using NCSA Telnet to access the LaserWriter Pro 810's Remote Console Facility (RCF), and am unable to enter super user mode. I can, however, enter super user mode through a terminal that I have directly connected to the printer's RJ-12 port.

How can I enter super user mode through Telnet?

DISCUSSION -----

When using Telnet to enter super user mode on the LaserWriter Pro 810, you must change the carriage return configuration from CR-LF to CR-NUL. Here is how to make this change.

Step 1

-----

Launch NCSA Telnet

Step 2

-----

Choose Preferences from the Edit menu, and choose Sessions from the submenu.

Step 3

-----

Click New to create a session, or highlight the session you normally use and Click Change.

Step 4

-----

Select Berkley 4.3 CR mode.

This changes the carriage return mode to CR-NUL.

Step 5

-----

Select OK to close the Sessions options dialog.

Step 6

-----

Select OK to close the Sessions dialog.

Once you have changed the CR mode, you can enter the super user mode.

The password to enter the super user mode is: SYSTEM

Article Change History:

18 Jul 1996 - Rewrote entire discussion.

Copyright 1994, Apple Computer, Inc.

Tech Info Library Article Number:14664