



# Tech Info Library

## Portable StyleWriter: Print Dialog Box Time Varies (3/94)

Revised: 3/25/94  
Security: Everyone

Portable StyleWriter: Print Dialog Box Time Varies (3/94)

=====

Article Created: 24 March 1994

TOPIC -----

The Portable StyleWriter manual states that after you click Print in the Print dialog box, a message appears on your screen for a few seconds, then disappears. The Dialog box stays on my screen longer, is the manual incorrect?

DISCUSSION -----

The proper time frame for seeing the Print dialog box is actually dependent on if background printing is enabled or disabled, as well as the length of the print job. Thus, the dialog can remain on the screen for as little as a few seconds, or may last much longer if background printing is OFF or if you are printing a large job.

Support Information Services

Copyright 1994, Apple Computer, Inc.

Tech Info Library Article Number:14969