



Tech Info Library

Portable StyleWriter: Pitch Button Not Used (3/94)

Revised: 3/25/94
Security: Everyone

Portable StyleWriter: Pitch Button Not Used (3/94)

=====
Article Created: 24 March 1994

TOPIC -----

The pitch button is not mentioned in the manual, how do I use it?

DISCUSSION -----

The pitch button is not used on the Portable StyleWriter, so it is not covered in the manual.

Support Information Services

Copyright 1994, Apple Computer, Inc

Tech Info Library Article Number:15013