

Power Macintosh: Using Sony Monitor with AV Card (12/94)

With the Sony Multiscan display, you need to change some of the settings on the video adapter. According to Sony, the settings you need on the wheel selector should be set to J with the DIP switches 4,7,8, and 9 set to the ON position.

DISCUSSION -----

Support Information Services

Copyright 1994, Apple Computer, Inc.

Tech Info Library Article Number:16936