



Tech Info Library

Portable StyleWriter: Insert Sheet of Paper Message (2/95)

Revised: 2/13/95
Security: Everyone

Portable StyleWriter: Insert Sheet of Paper Message (2/95)

=====
Article Created: 13 February 1995

TOPIC -----

When I print anything on my Portable StyleWriter, I get a message telling me to insert a sheet of paper and click OK to continue. I have to do this every time I print.

DISCUSSION -----

This message is normal. One workaround to avoid this message is to select "Automatic" as the paper source in the print dialog. Normally this option is used when there is an Automatic Sheet Feeder attached, but you can select it even if you do not have one. This prevents the message from appearing.

Support Information Services

Copyright 1995, Apple Computer, Inc

Tech Info Library Article Number:17185