



Tech Info Library

LaserWriter Bridge 2.0: How To Use (3/97)

Revised: 4/21/97
Security: Everyone

LaserWriter Bridge 2.0: How To Use (3/97)

=====
Article Created: 29 March 1995
Article Reviewed/Updated: 13 March 1997

TOPIC -----

This article describes using the LaserWriter Bridge software to connect your LocalTalk printer to an extended network.

DISCUSSION -----

Your LaserWriter printer has built-in support for a LocalTalk network. This allows you to connect the printer either to a single Macintosh computer or to a LocalTalk network of several computers and other devices. If you plan to use your printer with a single computer or as part of a LocalTalk network, you don't need to read this booklet.

In addition, you can create a "bridge" between your printer and an extended network such as Ethernet. To do so, you need to complete the following steps, described in this booklet:

- Connect the printer to a "host" Macintosh that is already part of an extended network.
- Install the LaserWriter Bridge software on the host Macintosh.
- Activate the LaserWriter Bridge software.

Connecting your printer to the network

Follow the instructions in the owner's guide that came with your printer to connect it to the Macintosh computer that will serve as the host computer. The host computer requires the following:

- The appropriate hardware and software for an extended network connection. For example, if you are connecting to an Ethernet network you need either an Ethernet card, or built-in Ethernet adapter, and EtherTalk software.

- System software version 7.0 or later.
- At least 4 MB of RAM (random access memory).

Installing the LaserWriter Bridge software

Follow these steps to install the LaserWriter Bridge software on the host Macintosh:

Step 1

Turn on the host Macintosh.

Step 2

Choose Control Panels from the Apple menu and double-click the Network icon.

Step 3

Select the network (such as EtherTalk) to which the host Macintosh is connected and close the Network control panel.

Step 4

Insert the LaserWriter Bridge disk in the floppy disk drive of the host computer.

Step 5

Drag the LaserWriter Bridge icon to the System Folder of your startup disk. A message appears asking whether you want to place LaserWriter Bridge in the Control Panels folder inside the System Folder.

Step 6

Click OK.

Step 7

Restart the host Macintosh.

Activating the LaserWriter Bridge software

Now that you have installed the LaserWriter Bridge software on your host Macintosh, you need to activate it. Follow these steps:

Step 1

Choose Control Panels from the Apple menu and double-click the LaserWriter Bridge icon.

Step 2

Click the On button to activate the LaserWriter Bridge software.

Step 3

Close the LaserWriter Bridge control panel.

Step 4

Restart the host Macintosh.

Whenever you start up the host Macintosh, the LaserWriter Bridge software will be active.

How the LaserWriter Bridge software works

Once you have installed and activated the LaserWriter Bridge software, the LocalTalk printer connected to the host Macintosh is available on the extended network whenever the host Macintosh is on. Network users can choose the printer in the Chooser, just as if it were a part of the extended network.

If there are AppleTalk routers on your extended network, multiple zones may be available to network users. In this case, the LocalTalk printer connected to the host Macintosh will appear in the same zone as the host Macintosh.

Because the host Macintosh must be on in order for the LocalTalk printer to be available to users on the extended network, you will see a dialog box when you choose Restart or Shut Down on the host Macintosh.

Click OK if you want to restart or shut down the computer. Click Cancel if you don't want to interrupt network users' access to the LocalTalk printer.

IMPORTANT: If File Sharing was active on the host Macintosh, choosing Restart or Shut Down will turn it off. It will be turned on again automatically the next time you start up the host Macintosh. If you clicked Cancel in the dialog box and want to reactivate File Sharing without restarting the computer, you need to click Start in the File Sharing section of the Sharing Setup control panel.

If you don't want this dialog box to appear each time you choose Restart or Shut Down, select the Disable shutdown warning checkbox in the LaserWriter Bridge control panel.

This article was published in the 13 March 1997 "Information Alley."

Article Change History:

13 Mar 1997 - Added Information Alley notification.

Copyright 1995-97, Apple Computer, Inc.

Tech Info Library Article Number:17476