



Tech Info Library

Network Server 500 & 700: Setting Display Resolution (2/96)

Revised: 2/26/96
Security: Everyone

Network Server 500 & 700: Setting Display Resolution (2/96)

=====
Article Created: 20 February 1996
Article REviewed/Updated: 26 February 1996

TOPIC -----

This article describes setting your display resolution on your Network Server 500 or Network Server 700.

DISCUSSION -----

After you've installed the operating system, you may want to customize your display resolution.

To set your screen preferences, you need to log in to AIX. To set your screen preference the following steps:

Step 1

Start SMIT.

To start SMIT, enter "smit" on the command line.

Step 2

Choose Devices.

The Devices menu appears.

Step 3

Choose Graphic Displays.

The Graphic Displays menu appears.

Step 4

Choose Display Resolution and Refresh Rate.

SMIT displays a list of available devices.

Step 5

Click the device name.

A dialog box appears with the attributes for the device.

Step 6

Specify your resolution and refresh rate.

Use the List button to display the available resolutions and refresh rates. For example, you can set your resolution and refresh rate to 1024x768@72Hz.

Step 7

Click OK.

Step 8

Restart your system.

Article Change History:

26 Feb 1996 - Changed distribution status.

Copyright 1996, Apple Computer, Inc.

Tech Info Library Article Number:19374