



Tech Info Library

Network Server LCD Values: Manual Correction (6/96)

Revised: 6/6/96
Security: Everyone

Network Server LCD Values: Manual Correction (6/96)

=====

Article Created: 20 March 1996
Article Reviewed/Updated: 6 June 1996

TOPIC -----

This article describes a "Using AIX, AppleTalk Services, and Mac OS Utilities on the Apple Network Server" manual correction.

DISCUSSION -----

Below is a corrected version of the table on page 161, Chapter 10 Troubleshooting, of the "Using AIX, AppleTalk Services, and Mac OS Utilities on the Apple Network Server" manual. These are the values displayed during a normal system startup.

Begin_Table

LCD	System Action
510	The system has started the configuration manager.
511	The configuration manager has completed.
517	The system is attempting to mount the / (root) and /usr file systems.
538	The configuration manager is passing control to a configuration method.
539	The configuration method has completed.
551	The system is attempting to vary on the root volume group.
553	The system has completed phase one of the boot process.
591	The system is configuring the Logical Volume Manager (LVM).
593	The system is configuring the low-function graphics terminal.
594	The system is configuring the rendering context manager.
704	The system is configuring a SCSI disk drive.
723	The system is configuring a CD-ROM or other SCSI device.
727	The system is configuring an asynchronous device.
731	The system is configuring a pseudo TTY.
811	The system is configuring the system planar (mainboard).

812 The system is configuring the standard I/O adapter.
814 The system is configuring the NVRAM.
821 The system is configuring the standard keyboard adapter.
823 The system is configuring the standard mouse adapter.
826 The system is configuring on-serial port 1.
828 The system is configuring the standard floppy disk adapter.
831 The system is configuring serial port 2.
868 The system is configuring the integrated SCSI adapter.
874 The system is configuring the graphics subsystem adapter.
921 The system is configuring a keyboard.
925 The system is configuring a mouse.
935 The system is configuring a 3.5-inch diskette drive.
9002 The system is configuring a SCSI-2 adapter.
c301 Apple Desktop Bus (ADB) time out.

End_Table

Article Change History:

06 Jun 1996 - Added another LCD code.

Copyright 1996, Apple Computer, Inc.

Tech Info Library Article Number:19497