



Tech Info Library

A/UX: MicroCom Modem Switch Settings

Revised: 9/24/92
Security: Everyone

A/UX: MicroCom Modem Switch Settings

=====

Article Created: 29 October 1990

Article Change History

08/31/92 - REVIEWED
o For technical accuracy.

TOPIC -----

I am trying to attach a high-speed modem directly to A/UX, but it won't answer the phone. When I attach to the Macintosh OS and run Kermit, the modem answers the phone. If I attach it to a Xenix system, it answers the phone. We've got a MicroCom 9600+ and a MicroCom 2400+. AutoAnswer, Carrier Detect, and DTR active. Macintosh Plus to RS-232 (not Apple cable).

DISCUSSION -----

The MicroCom modem Front Switch settings should be:

Switch 1 : Up Switch 2 : Down Switch 3 : Down Switch 4 : Up
Switch 5 : Up Switch 6 : Up Switch 7 : Up Switch 8 : Up

Rear Switch Settings should be:

Switch 1,2 : Down-Up
Switch 3,4 : Down-Up
Switch 5 : Down
Switch 6 : Up
Switch 7 : Down

Copyright 1990 Apple Computer, Inc.

Tech Info Library Article Number:6550